SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER USER'S GUIDE v.2016/03

Congratulations on your purchase of the **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER.** Countless food and non-food items can be preserved fresh for longer. With the magnet strip on the backside, **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER**. will be the most frequently used tool in your home.

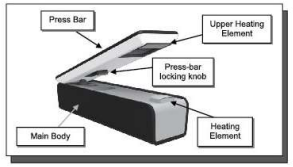

※***SEAL IN FLAVOR AND FRESHNESS with SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER.***

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. **NEVER TOUCH THE HEATING WIRE OR TOUCH ANOTHER PERSON WITH THE HEATING WIRE. INJURY MAY OCCUR AS A RESULT.**
3. Keep away from extreme humidity and water.
4. Do not place **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** on or near a hot gas or electric burner, or heated oven. Extreme heat might cause permanent damages on the devices.
5. Close supervision is necessary when the appliance is used by or near children.
6. This appliance is for household use only. Do not use this appliance for other improper use.
7. Please **DO NOT** charge **SMARTSEALER™** while using.

BEFORE USE

1. Please make sure **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** is fully charged.
2. There are several different sorts of plastic bags being used in packages and they differ from each other mainly on THICKNESS, MATERIAL AND HEAT RESISTANCE. **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** can seal any kind of plastic bag with up to 0.3mm thickness where most of the packages will unlikely exceed this measure.
3. For sealing thicker bags or bags with high resistance, the "Pre-Heating" time should be longer (suggested 10 seconds or more). This will allow the device to generate heat at higher temperatures.

HOW TO USE

1. Switch the locking knob from "**Lock**" to "**Seal**" on the press bar.
2. Press down slightly until both sides of heating pad engages and wait for 3 seconds to pre-heat.
3. Place the plastic bag between the main body and the press bar. Hold the plastic bag with one hand and **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** with the other. (Please leave enough space for your hand to hold plastic bag while sealing).
4. Start sliding **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** from starting point to the edge.

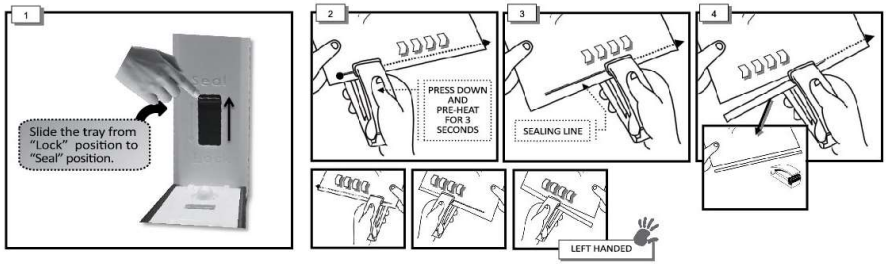

NOTES

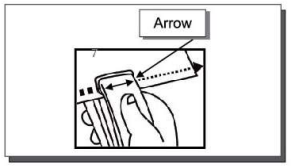

- During sealing process, thin bags will be "**SEALED AND CUT**" at the same time. This is not the malfunction.
- For thicker plastic bags, which **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** can "SEAL BUT CANNOT CUT THROUGH", please use the arrows at the tip of the press bar to keep sealing in the same line.

AFTER USE

1. Switch the locking knob from "**Seal**" to "**Lock**"on the press bar.
2. Close the press-bar while the item not in use.

Slide the tray from "Seal" position to "Lock" position.

TO RECHARGE

Plug the charging cable into the micro-USB port at the back of **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** , and plug the other head into the USB port on your Notebook or any adapter equipped with USB socket. You will see the **BLUE** light turned on while charging in progress. The LED light turns **RED** when the battery is fully recharged.

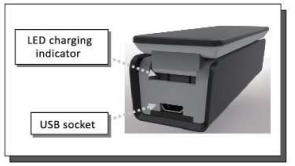

It takes around 45 minutes to recharge. After fully charged, you could seal up to 100bags!

REMEMBER

- Press down slightly.
- Preheat 3 seconds.
- Move slowly or quickly depending on thickness of the bag.
- It takes some practice to become comfortable with the sealing motion.
- During usage, if the sealer creates a hole on the bag, slide more quickly.
- If any part of the bag is not sealed entirely when the sealing motion is complete, simply re-apply the **SMARTSEALER™ USB RECHARGEABLE STORAGE BAG SEALER** to the unsealed part and move it over the area until a seal is achieved. Make sure that the interior walls of the bag are clean and that the opposite interior walls of the bag are touching one another.

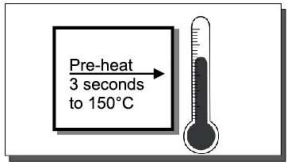

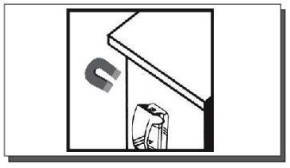

ISO 9000:2000 CE REACH RoHS PAHS